

# SNE-D discs and SNE-B skate boot pneumatic seeders



## Standard equipment:

- › **1** Sowing train with hydraulic folding in three-section bodies. (Except SNE-300 with body in one section and SNE-350. Sections with manual folding).
- › **2** 3 functions basic controller:
  - › Account-hectares
  - › R.p.m. turbine
  - › Fill sensor.
- › **3** Raking of springs in three sections. (In one section for the models of 3.00 m)..
- › **5** Independent sowing arms in two rows with skate boot in SNE-B.
- › **6** Independent sowing arms in two rows with discs in SNE-D.
- › **7** Mechanical turbine with cardan transmission, TFT 1000 r.p.m.
- › **8** Hydraulic jacks for augers.
- › **9** Hopper selector screen.
- › **10** Depth control.
- › **11** Scale control of planting depth.
- › **12** Wheel 10.0/75-15.3" and heavy crank.
- › **13** Depth control wheels on the wings from 5,00 m.
- › **14** Clears traces of seeder
- › **15** Rear lights kit.
- › **16** Level of leveling bubble.

## 2 rows sowing train with discs arms

CODE	MODEL	ARMS	ARMS SEP (cm)	CAPACITY (L)	WIDTH (m)		WEIGHT (kg)	POWER (CV)
					Work	Transport		
1021050006	SNE 300-2-24 D	24	12,5	1600	3	3	1130	80-90
1021050009	SNE 350-2-28 D	28	12,5	1600	3,5	3	1230	90-100
1021050012	SNE 400-2-32 D	32	12,5	1600	4	2,5	1270	100-110
1021050015	SNE 450-2-36 D	36	12,5	1600	4,5	2,5	1350	110-120
1021050020	SNE 500-2-40 D	40	12,5	1600	5	2,5	1460	120-130
1021050025	SNE 600-2-48 D	48	12,5	1600	6	3	1710	130-140

## 2 rows sowing train with skate boot arms

CODE	MODEL	ARMS	ARMS SEP (cm)	CAPACITY (L)	WIDTH (m)		WEIGHT (kg)	POWER (CV)
					Work	Transport		
1021050005	SNE 300-2-24 B	24	12,5	1600	3	3	1100	80-90
1021050008	SNE 350-2-28 B	28	12,5	1600	3,5	3	1200	90-100
1021050011	SNE 400-2-32 B	32	12,5	1600	4	2,5	1240	100-110
1021050016	SNE 450-2-38 B	38	12,5	1600	4,5	2,5	1310	110-120
1021050019	SNE 500-2-40 B	40	12,5	1600	5	2,5	1420	120-130
1021050024	SNE 600-2-48 B	48	12,5	1600	6	3	1660	130-140

### Standard equipment for SNE-R, SNE-D and SNE-B:



### Options for SNE-R, SNE-D and SNE-B

#### Leveling bar



FOR MODEL:	Level flat bar			Push level bar		
	CODE	WORK WIDTH (m)	WEIGHT (Kg)	CODE	WORK WIDTH (m)	WEIGHT (Kg)
BN 300 SNE	2021050011	3	240	2021050001	3	150
BN 400 SNE	2021050012	4	320	2021050003	4	196
BN 450 SNE	2021050013	4,5	355	2021050004	4,5	203
BN 500 SNE	2021050014	5	390	2021050005	5	212
BN 600 SNE	2021050015	6	425	2021050002	6	270

#### Sowing preparer

CODE	MODEL	ARMS	ARMS SEP. (cm)	WORK WIDTH (m)	WEIGHT (Kg)
2021050046	SNE 300	10	27,3 cm	300	370
2021050047	SNE 400	14	26,6 cm	400	460
2021050048	SNE 450	16	26,4 cm	450	490
2021050049	SNE 500	18	26,3 cm	500	540



**More options for SNE-R, SNE-D and SNE-B**



**Hopper increase 2.000 L  
SNE (all models)**

CODE

2021050034



**Hydraulic tracer set**

CODE

2021050039



**Increase disc compactor  
wheel tracer set (only for  
SNE-D). (Price per disc):**

CODE

2029000002



**Loading auger**

CODE

2021050054



**Distributor cap 40/20  
outputs (for SNE 500)**

CODE

2021050058



**Hydraulic transmission  
difference (tractor oil)**

CODE

2021050025



**Increment per wheel  
340/55-16"**

CODE

2021050030



**Side wheels for models  
of 4,00 m and 4,50 m.**

CODE

2021050037



**Wheel brake**

CODE

2021050027



**Set mud remover  
on side wheels**

CODE

2021050038



**LED work lights**

CODE

2029000001



**Increase in price for  
command radar in  
electric sowing**

CODE

2021050064



**Increase for 5 functions  
controller**

CODE

2021050029

- › Account-hectares.
- › R.p.m. turbine.
- › Advance speed control.
- › Fill sensor.
- › Turn dispenser filling alarm.

**Tramline sowing 2x2 in controller**

CODE

2021050059

**Total sowing cut**

CODE

2021050024



**Close independent outputs folding parts  
(only with 5-function electric controller \*)**

\* Installed in Solano Horizonte

CODE	MODEL
2021050007	SNE 400
2021050008	SNE 450
2021050009	SNE 500
2021050010	SNE 600



**Planting electric control**

CODE

2021050060